

Worksafe Lever Anchor Kit




Be Safe, DON'T become a working at height statistic.

Contents

Worksafe Lever Anchor / CAM Strap / 14mm masonry drill bit / bag of wall plugs

Instructions.

- 1) Drill 14mm hole to a depth of not less than 50mm
- 2) Insert barrel of Worksafe Anchor until the back-plate is flush with the wall
- 3) Move the lever into the lock position, you will feel resistance as the torque increases, then the lever will locate in the lock position. If the lever moves too easily and very little resistance is felt, you **MUST** assume the wall / surface is not sound and re-site the anchor.
- 4) Once the anchor is secure, run the CAM Strap through the centre of a rung, create a 90 degree angle between the ladder stiles and the CAM Strap, this will give the most secure fix.
- 5) To remove, simply disengage the CAM strap, then reverse the anchor installation process, if any resistance is felt removing the anchor, a quick tap on the lever with the palm of the hand will release it, finally place a wall plug in the hole to tidy up and stop any ingress of moisture.

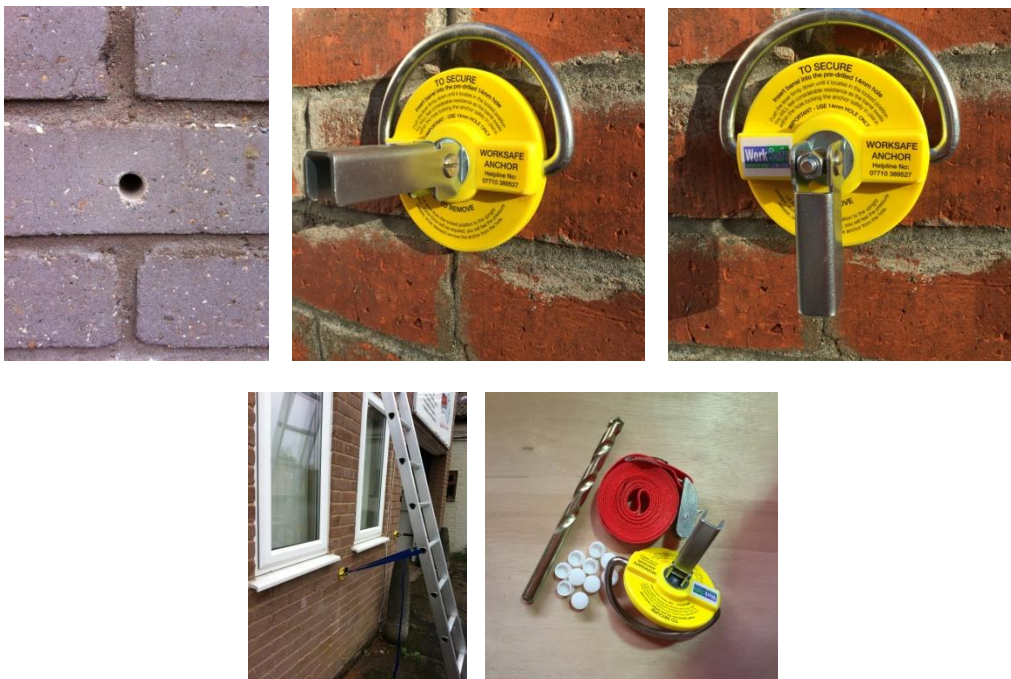

Pictures, showing 14mm hole, anchor barrel in place, but not locked, anchor with lever in locked position, CAM Strap secured and full kit components showing the wall plugs.